

Encore CX Time Change

At the Attendant Station (usually x100 or 101) press "299 on the touch pad
your display will change to show "time and date"

Enter two digits each for Year, Month, Day, Hours, Minutes
(YY MM DD HH MM)

for example, 99 04 05 13 15 would mean Year 1999, Month April, Day 05, Hour 1 pm,
and minutes 15)

you should hear a long beep to indicate that the information was successfully entered.
press the MON key to turn off the speaker