

## Tadiran Ice Time Change

From a Deluxe phone

1. Press: PGM #\*

input password (default is #####)

press: SHOW (middle soft key)

2. Enter 08-14-01 and then press the soft key beneath save. The following will be displayed: YEAR :04

back next chg

3. Press the soft key beneath chg to change the year. Enter the last 2 digits of the year from the telephone keypad.

4. When you have completed the year changes, press the soft key beneath save to save the year entry and then the soft key beneath next to advance to the next programming screen as shown below.

MONTH :JAN

back next chg

5. Press the soft key beneath chg to change the month. Continue pressing the chg button to cycle the months to the month you would like to save.

6. When the desired month is in place, press the soft key beneath next to advance to the next programming screen as shown below.

DAY :1

back next chg

7. Press the soft key beneath chg to change the day of the month. Enter the day using the telephone keypad.

8. When the desired day is in place, press the soft key beneath save to save your day entry and then the soft key beneath next to advance to the next programming screen as shown below.

WEEKDAY :WED

back next chg

9. Press the soft key beneath chg to change the day of week. Continue pressing the chg button to cycle the days of the week to the day you would like to save.

10. When the desired day or the week is in place, press the soft key beneath next to advance to the next programming screen as shown below.

HOUR :18

back next chg

11. Press the soft key beneath chg to change the hour of the day. Enter the day using the telephone keypad in 24 hour format.

12. When the desired hour of the day is in place, the soft key beneath next to advance to the next programming screen as shown below.

MINUTE :22

back next chg

13. Press the soft key beneath chg to change the minutes of the hour. Enter the minutes using the telephone keypad.

14. When the desired minutes of the hour is in place, press the soft key beneath save to save your entry. Press the SPKR button twice to exit the programming mode.